



①



Strip off 1.2 inch of a cable jacket.


②

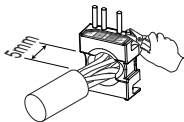

Insert a cable into the termination cap and fan out all four twisted pairs.

Following the instruction of the color-coded wire position printed on the termination cap, position conductors into the slots and make sure the conductors are in the proper slot. Trim the ends of the conductors


③

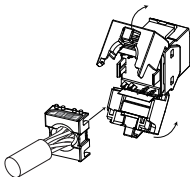

Install the termination cap to outlet, which will also allocate the conductors sitting on the slots.


JACK PIN DESIGNATIONS	1 2 3 6 4 5 7 8	TIA / EIA T568A	TIA / EIA T568B
		White/Green Green	White/Orange Orange
		White/Orange Orange	White/Green Green
		Blue	Blue
		White/Blue	White/Blue
		White/Brown Brown	White/Brown Brown

④

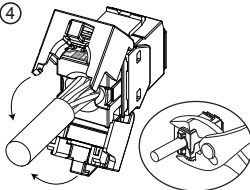

Secure the hinged outlet by using a crimp tool until it completely snap to effect the connection.

⑤

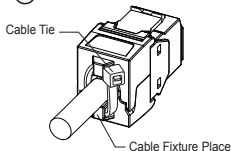

Fasten a cable tie wrap to secure the cable fixture place